

- The number shown in each ▶ is the page number where the part's function and/or use are explained in Japanese.

Front view

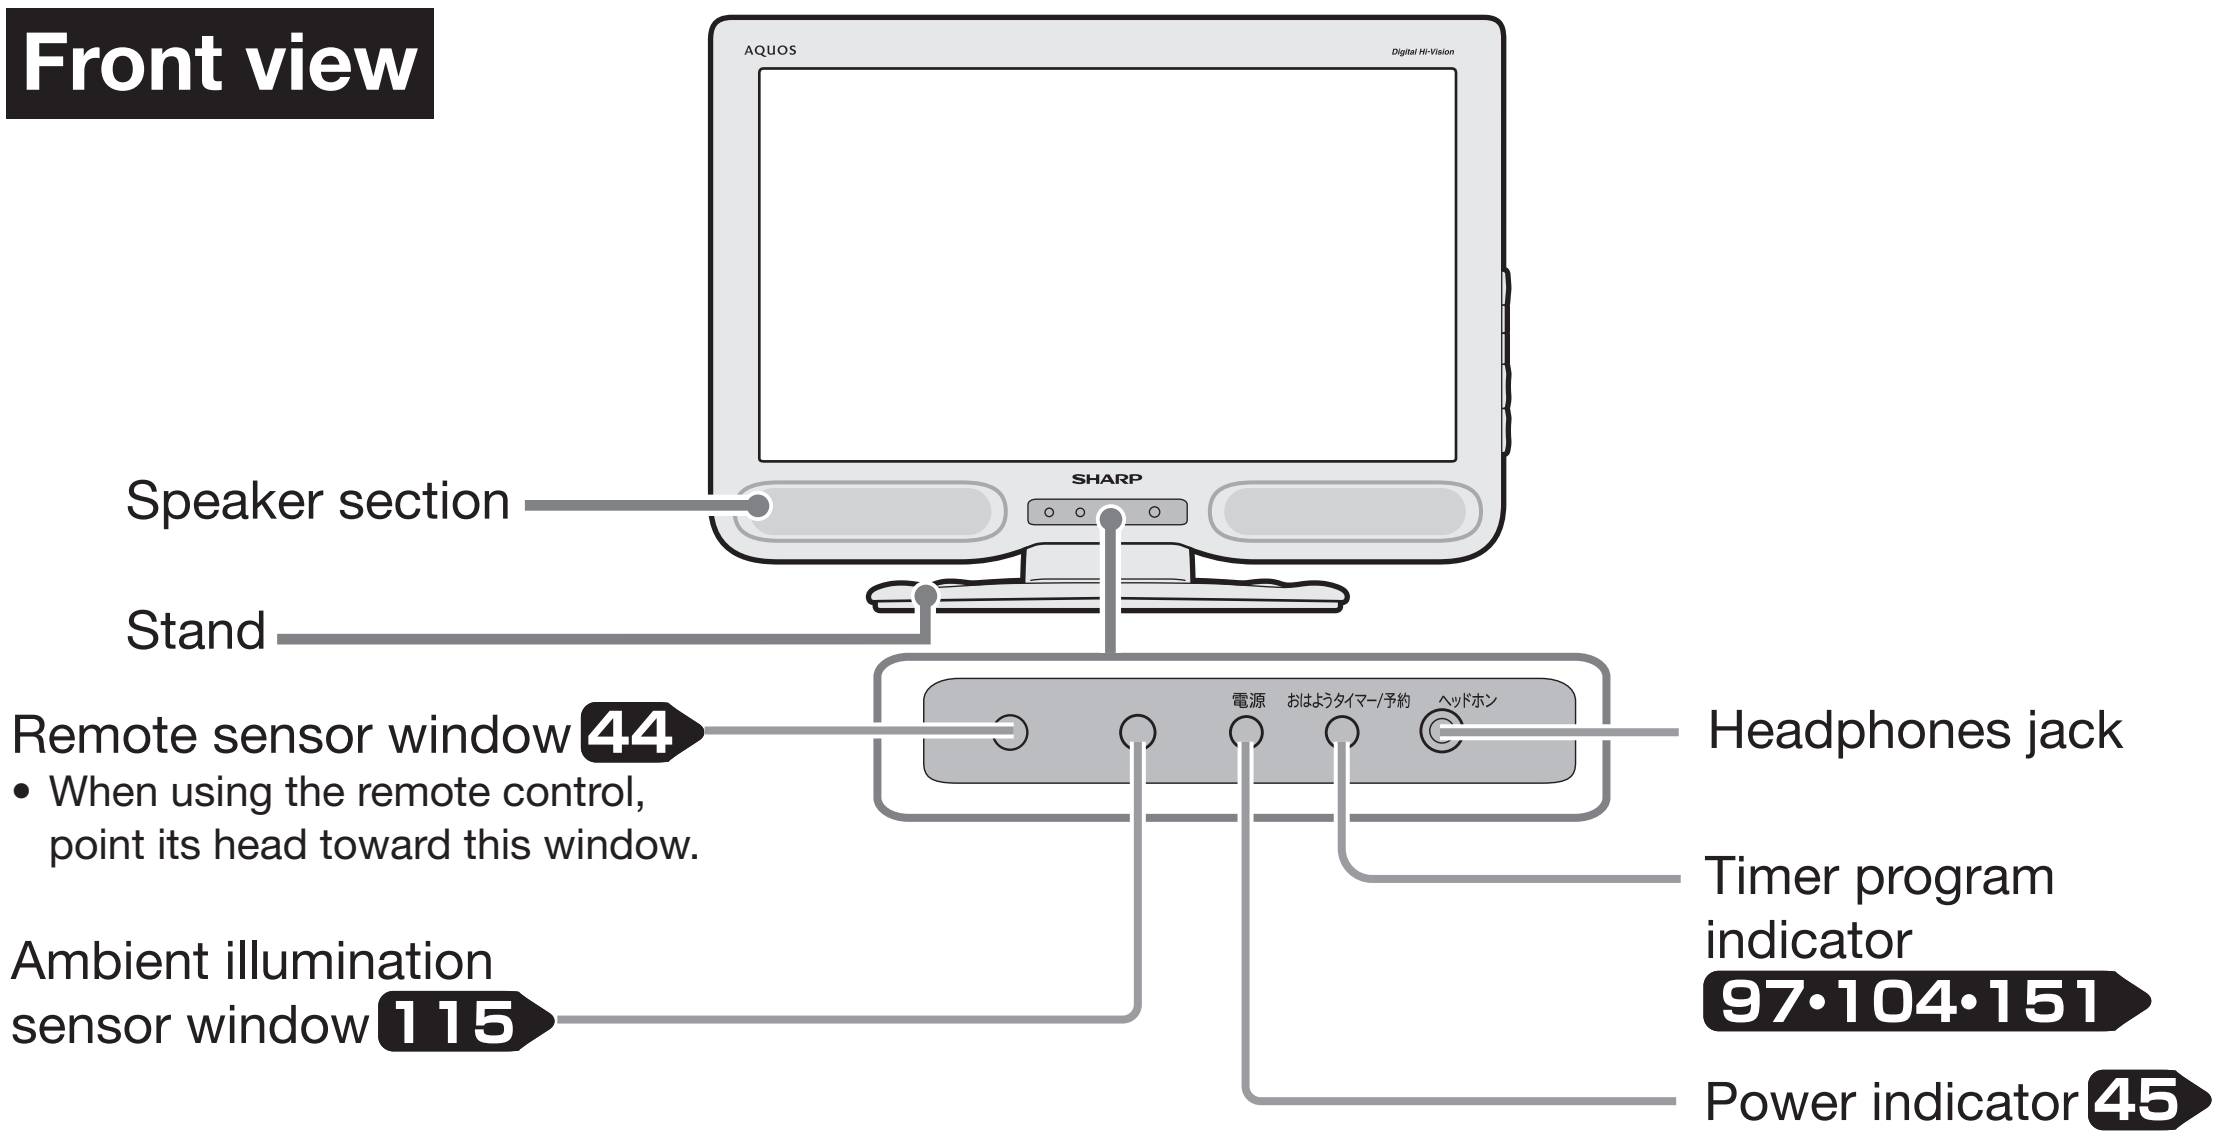

Adjusting the LCD panel angle
- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Left Side view

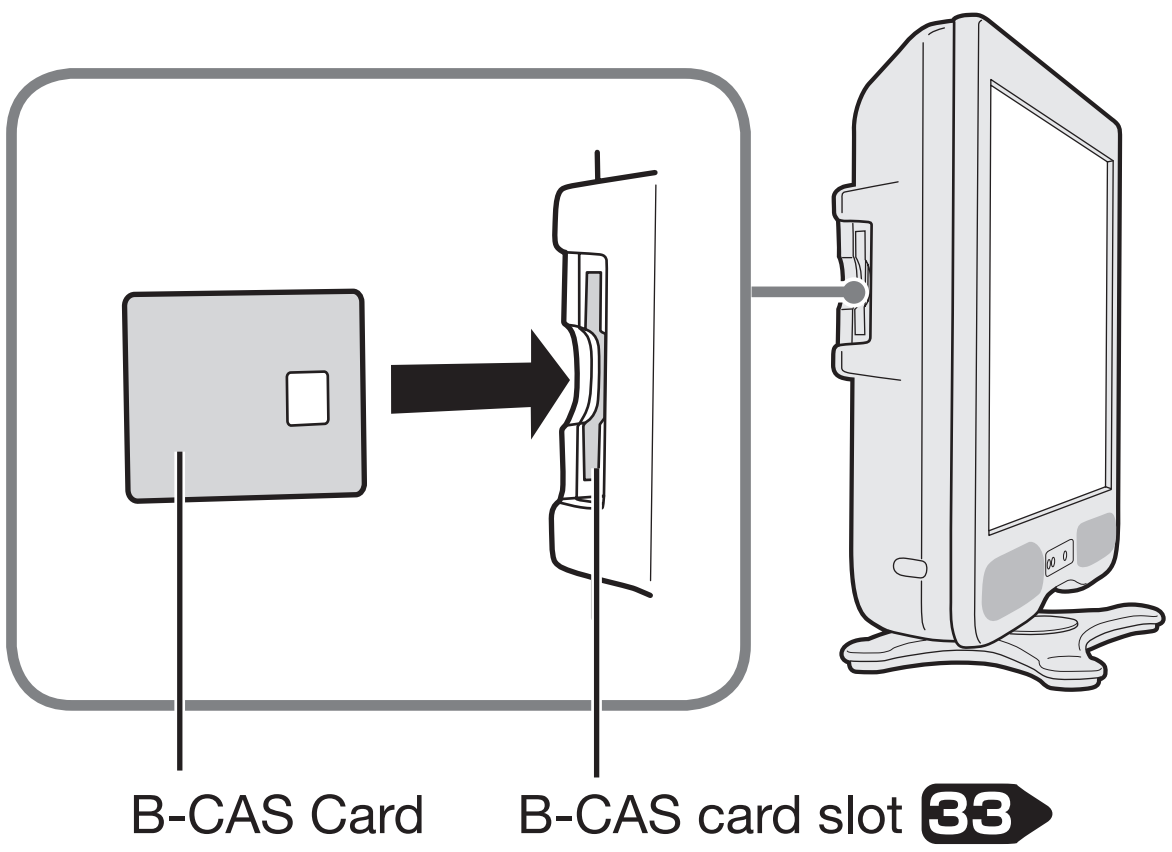

Back view


LAN jack (10BASE-T/100BASE-TX) 176

Connect a Blu-ray Disc player, AV amplifier, etc.

AV in 1 and 2 (HDMI) 131•132•139•155•157～158

AV in 4 131•155

AV in 3 131•155

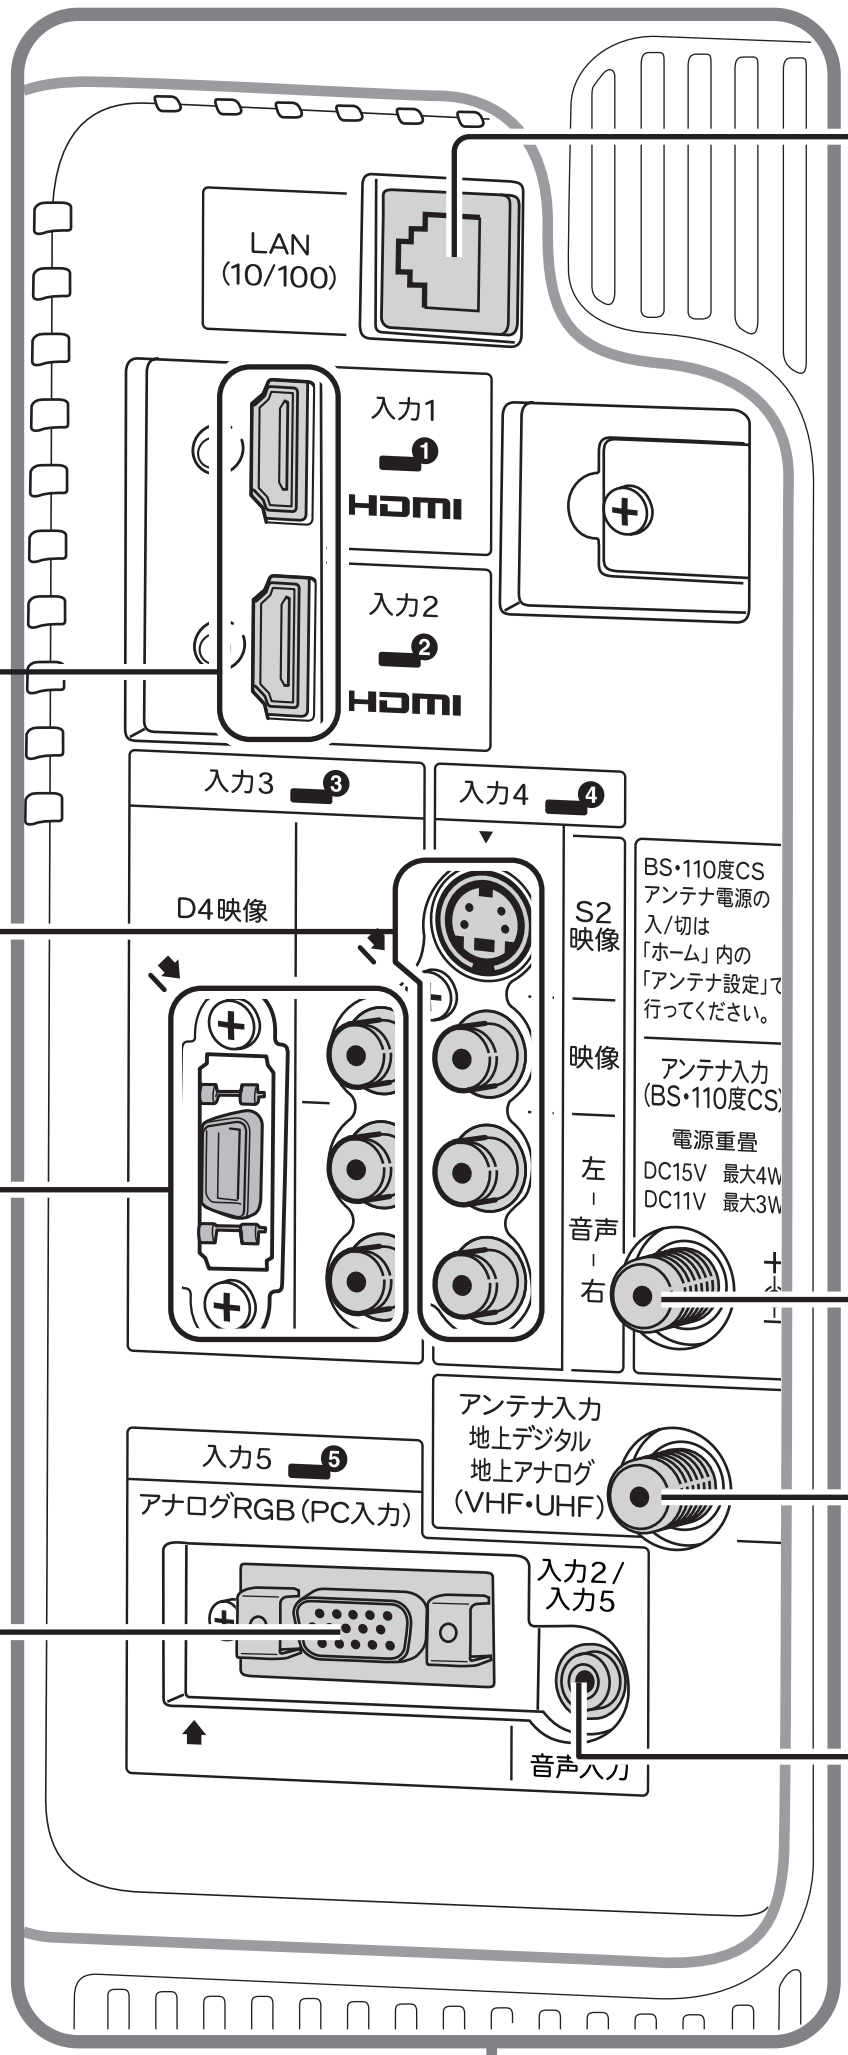


BS·CS 110 antenna input terminal 37～39

VHF·UHF antenna input terminal 36～39


AV in 5 (PC) 159

PC input (audio) 157～159•164

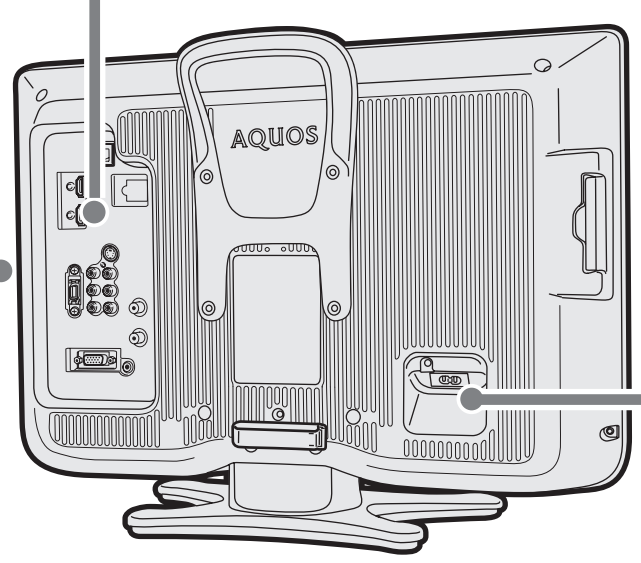

Connect the AC cord

AC cord connector (AC 100V) 42

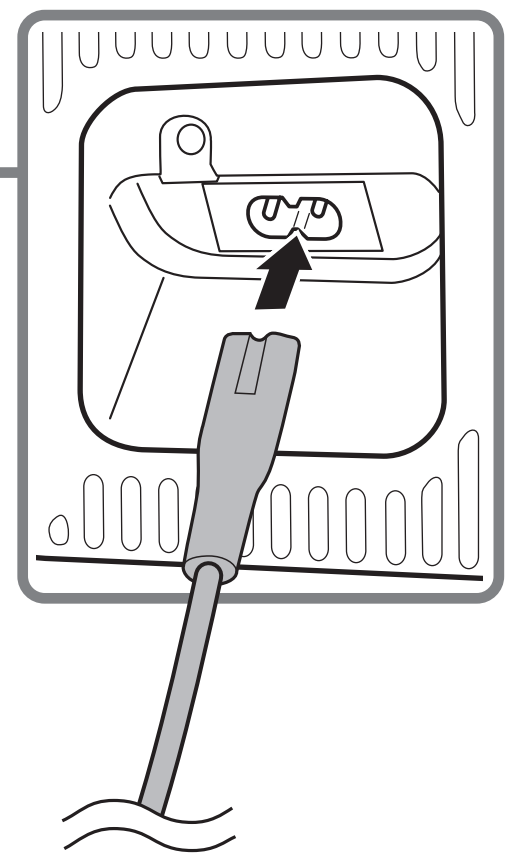

Control panel

Right side view


Main power switch 45

Home Menu 24

Input / TV select (Enter) button 133

Channel up (︿) / down (﹀) buttons

Volume up (+) / down (–) buttons

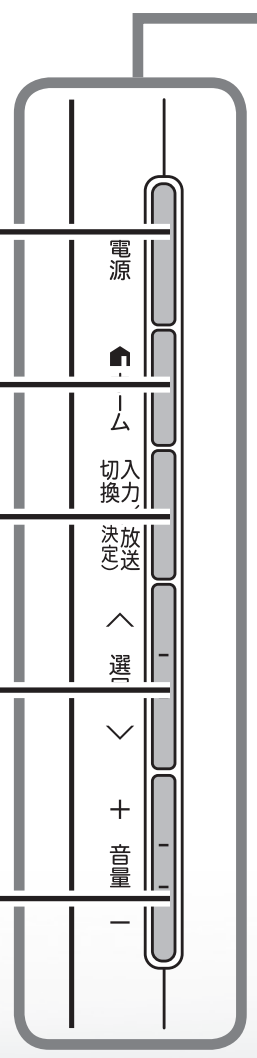

Part Names - Remote Control Unit

Active/Standby 45
Press to engage the TV set in the active or standby mode.

3桁入力 (CATV) **Digital channel number input** 82
Use to select a digital channel by entering the 3-digit channel number.

CATV 82
When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

地上D **Terrestrial digital select** 78
BS **BS select** 78
CS **CS select** 78
地上A **Terrestrial analog select** 78
Select the CS digital channel for the first time. 51

d **linked data broadcast** 102
Press to call the data broadcast linked with the current digital TV program.

音量 **Volume up (+)/down (–)** 79
Press to adjust the volume.

消音 **Mute** 79
Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

番組情報 **Program info** 102
Press to display detailed information on the current digital program.

番組表 **EPG** 85
Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

ホーム **Home Menu** 24
Press to display or turn off the menu screen.


Finish 24
Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

画面サイズ **Screen mode** 110・160
Press to select the desired screen mode.


テレビ/データ **Media select** 83
Press to select the desired media (TV or data).

Familink 148・152〜154
Press to operate “Familink” Recorders and AQUOS Surround connected via HDMI cables.

Display 80
Press to display or turn off the channel call, etc.

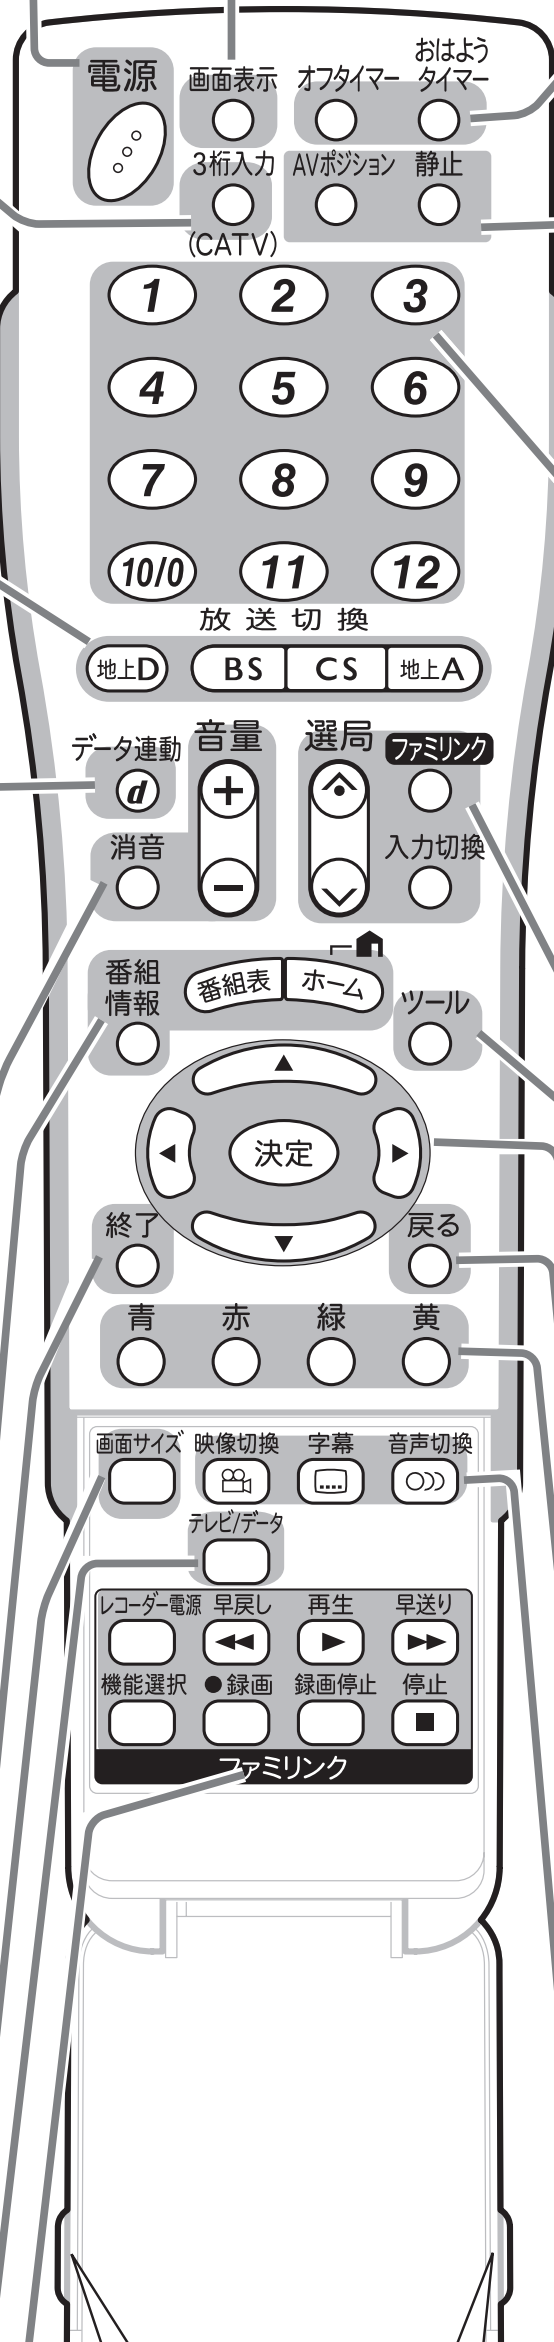

To open the cover
Hold the cover by the projections on both sides and lift upwards.

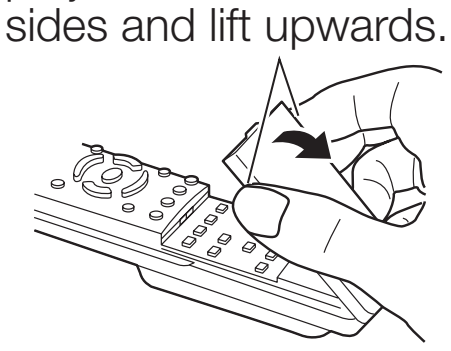

オフタイマー **Sleep timer** 169
Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

おはようタイマー **Wake up timer** 104
Press to set wake up timer.

AVポジション **AV mode select** 113
Press to select the picture/sound setting that best matches the current program.

静止 **Freeze** 101
Press to freeze the picture.

Channel select 79
- Press to select a channel.
- Use to input a number for various settings.

選局 **Channel up (∧)/down (∨)** 79
Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.

ファミリンク **Familink** 149
Press to operate “Familink” Recorders and AQUOS Surround connected via HDMI cables.

入力切換 **Input select** 133
Press to select the desired input.

Display the Tool Menu

Cursor (up, down, left, right) 24
Use to select a menu item, column, etc.

決定 **Enter/Confirm** 24
Press to confirm a selected setting or menu item.

Return 24
Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

Color 88〜89
Use to operate EPGs and data program screens.

映像切換 **Picture select** 99
Press to select the desired picture when watching a digital multi-picture program.

字幕 **Caption** 99・100
Press to display, select, or turn off captions when watching a digital program with captions.

音声切換 **Audio select** 98・99
Press to select the desired audio.

Switching the Display Language to English
ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.
  ホームメニューなどの画面表示を英語にすることができます。





おしらせ


誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「(View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

Press ホーム and select with


Select “設定” (Setup) on the Home menu.
ホームメニューから「設定」を選ぶ

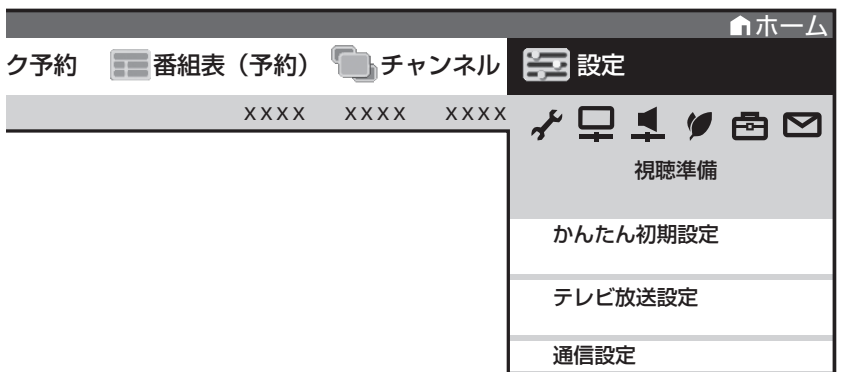

2

Select with


Select “(視聴準備)” (View Setting).
(視聴準備) を選ぶ

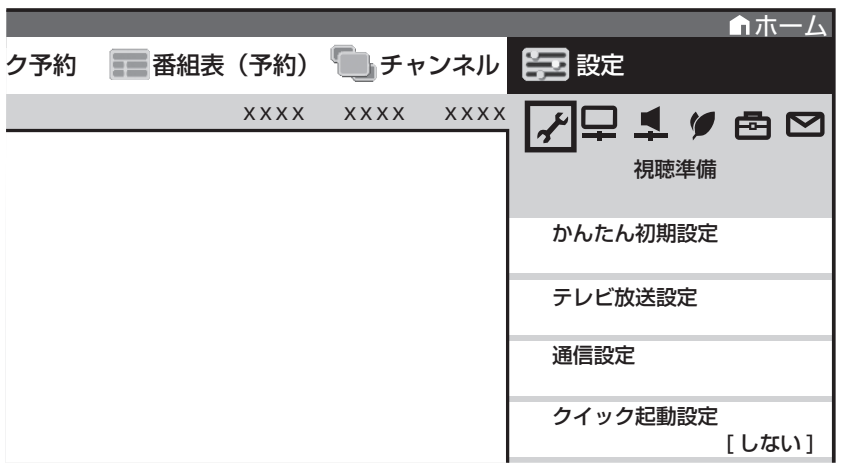

3

Select with
Press 決定

Select “Language (言語)”.
「Language (言語)」を選ぶ

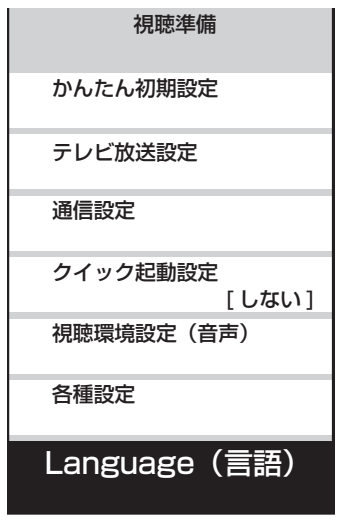

4

Select with
Press 決定

Select “English”.
「English」を選ぶ
Enter.
決定する



- The menu screen is now displayed in English.
- 画面表示が英語になります。

5

Press 終了

Finish this operation.
終了する